

Внимание! Устройство iComrFK выводит информацию на приборную панель через навигационные подсказки.

Если у вас не было с завода навигации, то необходимо активировать ее в приборной панели.

Нужно UCDS/ELS27/ELM327hs+ms + forscan и т.п.

Если возникли трудности пишите в телегу @dizz74 , нужен будет VIN

В Центральной конфигурации CCC(Asbuilt):

172 пункт – значение 9(пункт with Nav).

Пример UCDS


ID	Name	Value	Hex
163	Lap belt pretensioner front - N/A	Not Recognized	00
164	Front crash sensing system - N/A	Not Recognized	00
165	Adaptive front ventilation - N/A	Not Recognized	00
166	Front door warning lamps	Less Front Door Warning Lamps	01
167	Electronic park brake stall apply	Not Recognized	00
168	Electronic park brake key out apply	Not Recognized	00
169	Electronic park brake drive away release	Not Recognized	00
170	Battery saver time	Not Recognized	00
171	Heated steering wheel - N/A	Not Recognized	00
172	FRONT CENTRE MOUNTED DISPLAY	With Display - Touchscreen, Colour-TFT, DM8 with Nav	09
173	Rear entertainment system	Not Recognized	00
174	My connected world - N/A	Not Recognized	00
175	Speech control language	Not Recognized	00
176	Key code	Not Recognized	00
177	Self opening boot / tailgate	Self Opening Tailgate	03
178	Shift indication	With Shift Indication	02

Info: File successfully opened correct Asbuilt file

И в Direct Config IPC в 2 двух местах:

Панель KUGA2(13-17)(дорест)

DE09: пункт Navigation repeater

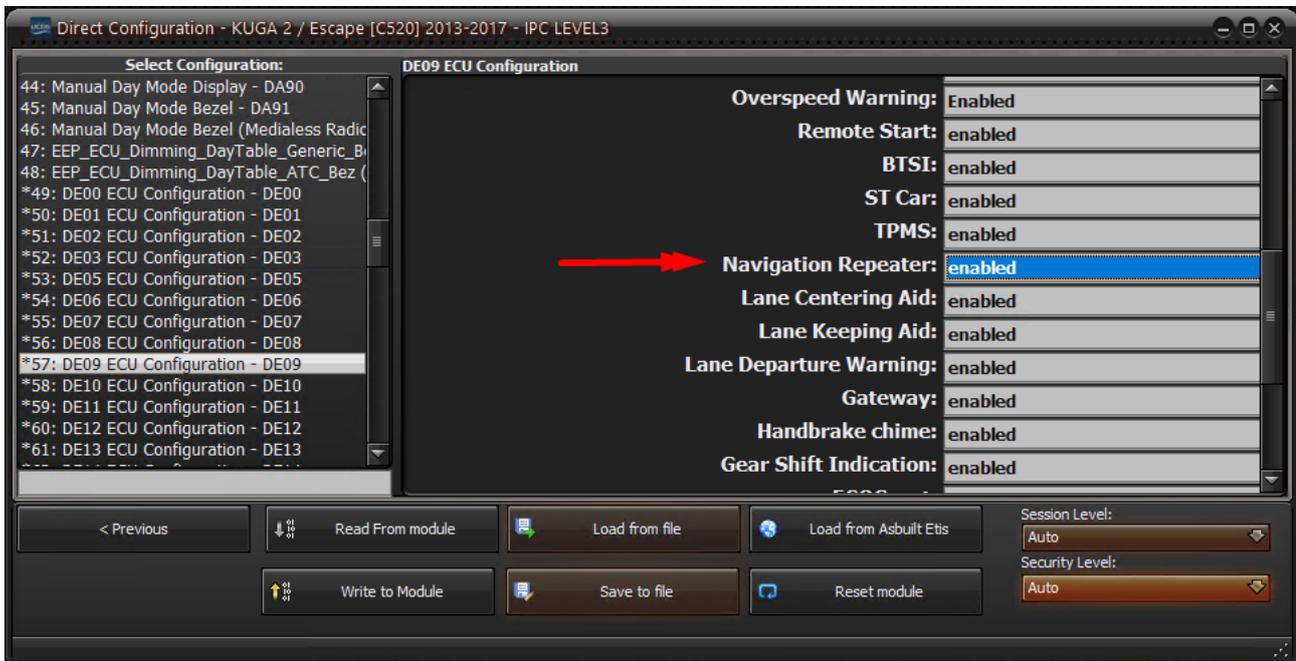

DE22: NavInfo

Direct Configuration - KUGA 2 / Escape [C520] 2013-2017 - IPC LEVEL3

Select Configuration:	DE22 ECU Configuration
44: Manual Day Mode Display - DA90	PRNDL/PRNDS: PRNDS
45: Manual Day Mode Bezel - DA91	Measure units (IFE) km/l 1: enabled
46: Manual Day Mode Bezel (Medialess Radic	TSR Optimisation selectable countries: enabled
47: EEP_ECU_Dimming_DayTable_Generic_Bi	TSR Optimisation: enabled
48: EEP_ECU_Dimming_DayTable_ATC_Bez (TSR Disclaimer: enabled
*49: DE00 ECU Configuration - DE00	TSR Over Speed Warning (Warning Treshold): enabled
*50: DE01 ECU Configuration - DE01	TSR: enabled
*51: DE02 ECU Configuration - DE02	FCW: enabled
*52: DE03 ECU Configuration - DE03	Alarm: enabled
*53: DE05 ECU Configuration - DE05	Parkheater: enabled
*54: DE06 ECU Configuration - DE06	Aux Heater: enabled
*55: DE07 ECU Configuration - DE07	Nav info: enabled
*56: DE08 ECU Configuration - DE08	Compass#: enabled
*57: DE09 ECU Configuration - DE09	Home Light: enabled
*58: DE10 ECU Configuration - DE10	Dimming: enabled
*59: DE11 ECU Configuration - DE11	Ambient Light: enabled
*60: DE12 ECU Configuration - DE12	Rain Light: enabled
*61: DE13 ECU Configuration - DE13	Auto High Beam: enabled
*62: DE14 ECU Configuration - DE14	Hill Start Assist: enabled
*63: DE15 ECU Configuration - DE15	TPMS Menu: enabled
*64: DE16 ECU Configuration - DE16	
*65: DE17 ECU Configuration - DE17	
*66: DE18 ECU Configuration - DE18	
67: DE20 ECU Configuration - DE20	
68: DE21 ECU Configuration - DE21	
*69: DE22 ECU Configuration - DE22	
70: DE23 ECU Configuration - DE23	
71: Dev. CAN frames config - EE05	
72: EFFC: Ecoscout 4 Index and Short trip po	
73: EFFE: Eco scout Const parameters - EFFF	
74: EFFF: Eco scout variable parameters - E	